

TROUBLE DIAGNOSIS — INDEX

 
Alphabetical & P No. Index for DTC (Cont'd)

P NO. INDEX FOR DTC

=NFFC0001S02

DTC*1	Items (CONSULT-II screen terms)	Reference page
—	Unable to access ECM	EC-130
P0000	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	—
P0100	MAF SEN/CIRCUIT*3	EC-164
P0105	ABSL PRES SEN/CIRC	EC-172
P0110	AIR TEMP SEN/CIRC	EC-178
P0115	COOLANT T SEN/CIRC*3	EC-183
P0120	THRTL POS SEN/CIRC*3	EC-188
P0125	*COOLANT T SEN/CIRC	EC-200
P0130	FRONT O2 SENSOR-B1	EC-205
P0131	FRONT O2 SENSOR-B1	EC-215
P0132	FRONT O2 SENSOR-B1	EC-223
P0133	FRONT O2 SENSOR-B1	EC-231
P0134	FRONT O2 SENSOR-B1	EC-244
P0135	FR O2 SE HEATER-B1	EC-252
P0137	REAR O2 SENSOR-B1	EC-259, 304
P0138	REAR O2 SENSOR-B1	EC-269, 312
P0139	REAR O2 SENSOR-B1	EC-279, 320
P0140	REAR O2 SENSOR-B1	EC-289, 328
P0141	RR O2 SE HEATER-B1	EC-297, 335
P0150	FRONT O2 SENSOR-B2	EC-205
P0151	FRONT O2 SENSOR-B2	EC-215
P0152	FRONT O2 SENSOR-B2	EC-223
P0153	FRONT O2 SENSOR-B2	EC-231
P0154	FRONT O2 SENSOR-B2	EC-244
P0155	FR O2 SE HEATER-B2	EC-252
P0157	REAR O2 SENSOR-B2	EC-259
P0158	REAR O2 SENSOR-B2	EC-269
P0159	REAR O2 SENSOR-B2	EC-279
P0160	REAR O2 SENSOR-B2	EC-289
P0161	RR O2 SE HEATER-B2	EC-297
P0171	FUEL SYS-LEAN/BK1	EC-340
P0172	FUEL SYS-RICH/BK1	EC-348
P0174	FUEL SYS-LEAN/BK2	EC-340
P0175	FUEL SYS-RICH/BK2	EC-348
P0180	FUEL TEMP SEN/CIRC	EC-355

TROUBLE DIAGNOSIS — INDEX



Alphabetical & P No. Index for DTC (Cont'd)

DTC*1	Items (CONSULT-II screen terms)	Reference page	
P0217	ENG OVER TEMP	EC-360	GI
P0300	MULTI CYL MISFIRE	EC-378	MA
P0301	CYL 1 MISFIRE	EC-378	
P0302	CYL 2 MISFIRE	EC-378	EM
P0303	CYL 3 MISFIRE	EC-378	
P0304	CYL 4 MISFIRE	EC-378	LC
P0305	CYL 5 MISFIRE	EC-378	
P0306	CYL 6 MISFIRE	EC-378	EC
P0325*2	KNOCK SEN/CIRC-B1	EC-386	
P0335	CPS/CIRCUIT (POS)	EC-391	FE
P0340	CAM PS/CIRC (PHS)	EC-399	
P0400	EGR SYSTEM	EC-405	CL
P0403	EGR VOL CONT/V CIR	EC-414	
P0420	TW CATALYST SYS-B1	EC-421, 426	MT
P0430	TW CATALYST SYS-B2	EC-421, 426	
P0440	EVAP SMALL LEAK	EC-431	AT
P0443	PURG VOLUME CONT/V	EC-447	
P0446	VENT CONTROL VALVE	EC-453	AX
P0450	EVAP SYS PRES SEN	EC-460	
P0455	EVAP GROSS LEAK	EC-472	SU
P0460	FUEL LV SE (SLOSH)	EC-485	
P0461	FUEL LEVEL SENSOR	EC-489	BR
P0464	FUEL LEVL SEN/CIRC	EC-491	ST
P0500	VEH SPEED SEN/CIRC*4	EC-495	
P0505	IACV/AAC VLV/CIRC	EC-499	RS
P0510	CLOSED TP SW/CIRC	EC-508	
P0600*2	A/T COMM LINE	EC-517	BT
P0605	ECM	EC-520	
P0705	PNP SW/CIRC	AT-102	HA
P0710	ATF TEMP SEN/CIRC	AT-108	
P0720	VEH SPD SEN/CIR A/T*4	AT-114	SC
P0725	ENGINE SPEED SIG	AT-119	
P0731	A/T 1ST GR FNCTN	AT-124	EL
P0732	A/T 2ND GR FNCTN	AT-130	
P0733	A/T 3RD GR FNCTN	AT-136	IDX
P0734	A/T 4TH GR FNCTN	AT-142	
P0740	TCC SOLENOID/CIRC	AT-151	

TROUBLE DIAGNOSIS — INDEX

Alphabetical & P No. Index for DTC (Cont'd)

DTC*1	Items (CONSULT-II screen terms)	Reference page
P0744	A/T TCC S/V FNCTN	AT-156
P0745	L/PRESS SOL/CIRC	AT-166
P0750	SFT SOL A/CIRC*3	AT-172
P0755	SFT SOL B/CIRC*3	AT-177
P1126	THERMOSTAT FNCTN	EC-522
P1130	SWIRL CONT SOL/V	EC-524
P1148	CLOSED LOOP-B1	EC-548
P1165	SWL CON VC SW/CIRC	EC-550
P1168	CLOSED LOOP-B2	EC-548
P1211*2	TCS C/U FUNCTN	EC-556
P1212*2	TCS CIRC	EC-558
P1217*2	ENG OVER TEMP	EC-561
P1220	FPCM/CIRCUIT	EC-578
P1320	IGN SIGNAL-PRIMARY	EC-585
P1335	CPS/CIRCUIT (REF)	EC-596
P1336	CPS/CIRC (POS) COG	EC-602
P1401	EGR TEMP SEN/CIRC	EC-610
P1402	EGR SYSTEM	EC-618
P1440	EVAP SMALL LEAK	EC-627
P1444	PURG VOLUME CONT/V	EC-629
P1446	VENT CONTROL VALVE	EC-641
P1447	EVAP PURG FLOW/MON	EC-649
P1448	VENT CONTROL VALVE	EC-661
P1464	FUEL LEVEL SEN/CIRC	EC-670
P1490	VC/V BYPASS/V	EC-673
P1491	VC CUT/V BYPASS/V	EC-679
P1605	A/T DIAG COMM LINE	EC-691
P1610 - P1615*2	NATS MALFUNCTION	EL-324
P1705	TP SEN/CIRC A/T*3	AT-182
P1706	P-N POS SW/CIRCUIT	EC-694
P1760	O/R CLTCH SOL/CIRC	AT-191

*1: 1st trip DTC No. is the same as DTC No.

*2: This DTC is displayed with CONSULT-II only.

*3: When the fail-safe operation occurs, the MIL illuminates.

*4: The MIL illuminates when both the "Revolution sensor signal" and the "Vehicle speed sensor signal" meet the fail-safe condition at the same time.

NOTE:

Regarding A33 models, "-B1" and "BK1" indicate right bank and "-B2" and "BK2" indicate left bank.